



INSTRUCTIONS FOR MOUNTING INDOOR FLAG SETS


1. Insert top half of pole into sleeve of Colonial Nyl-Glo flag.
2. Detach male part of tab from inside of sleeve, peel off the adhesive backing and affix to pole just below indentation.
3. Connect the female part of the tab, which is sewn inside the sleeve, to the male part that you have just stuck to the pole.
4. Remove the screw eye that is taped inside the ornament and put the ornament on the pole. Insert the screw eye through the hole in the ornament and into the pole where the hole is drilled out.
5. Loop the cord and tassel through the screw eye as illustrated below.
6. Screw the top and bottom sections of the pole together.
CAUTION: Be careful not to over-tighten or cross thread.
7. Insert the bottom of the pole into the floor stand. If the pole does not go into the stand easily, check and make sure the reducer insert has been removed from the floor stand.

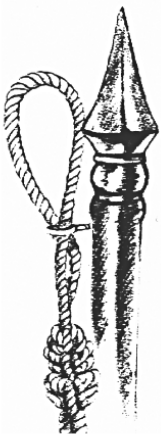

A. Insert folded end of C&T up through bottom of screw eye.

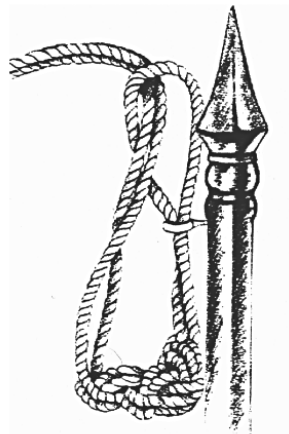

B. Pass loose ends of C&T through and over loop above screw eye.

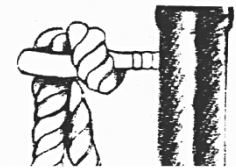

C. Pull down gently until C&T is snug against pole and drape over front of flag.